Simplex

IDNet™ Manual Callpoint

IDNet Communicating Devices External Addressable Manual Callpoint

Features

Individual addressable manual fire alarm callpoint with:

- Power and data supplied via IDNet addressable communications using a single wire pair
- Enhanced aesthetics
- Designed for fast and easy installation
- Designed for EMI compatibility
- Surface mounting
- Test key allows the callpoint to be tested without breaking the glass
- Requires a special key to open the callpoint
- Simple snap fit to mounting box

Compatible with Simplex Model series 4010 and 4100U

Description

These addressable manual callpoints, with compact communications module, are easily installed to satisfy demanding applications. An integral individual addressable module (IAM) monitors status and communicates changes to the connected control panel via IDNet communications.

Specifications

Power and Communications	IDNet, 1 address per callpoint
Address Means	DIPswitch, 8 position
Device Type	KACPUL
Wire Connections	M3 spade terminals
Storage and Operating Temperature Range	-22°F to 158°F (-30° C to 70° C)
Humidity Range	Up to 95% RH non-condensing
Ingress Protection	IP67
Color	Red, RAL3001
Material	PC/ABS
Dimensions	3-5/8" H x 3-1/2" W x 2-7/8" D (93 mm x 89 mm x 28 mm)




IDNet Addressable Manual Callpoint

Operation

Activation of the Simplex callpoint requires the glass element to be broken. Completing the action operates a micro-switch whose condition is signaled back to the control panel.

Callpoint reset requires the use of a special key (supplied with the callpoint) to remove the front cover which allows the glass element to be replaced.

Callpoint testing is performed by inserting the key fully into the bottom of the housing and pulling down, this releases the bottom of the housing and break glass element. To reset the callpoint, the bottom of the housing is pushed upwards until it locks in position. (See illustration below.)

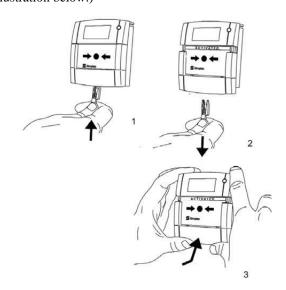

Callpoint Testing

This product is not presently agency listed. Contact your local Simplex product supplier for the latest status.

Application Reference

Refer to NFPA 72, the *National Fire Alarm Code*, and all applicable local codes for complete requirements for manual callpoints. The following summarizes the basic requirements:

- 1. Callpoints shall be located in the normal path of exit and distributed in the protected area such that they are unobstructed and readily accessible.
- 2. Mounting shall be with the operable part not less than 3-1/2 ft (1.1 m) and not more than 4-1/2 ft (1.37 m) above floor level.
- 3. At least one callpoint shall be provided on each floor. Additional callpoints shall be provided to obtain a travel distance not more than 200 ft (61m) to the nearest callpoint from any part of the building.
- 4. When manual callpoint coverage appears limited in any way, additional callpoints should be installed.

Product Selection


4099-9706


Addressable Manual Callpoints with Internal IAM

Callpoint replacement glass, package of 10

Model	Description
4099-9707	Simplex external English callpoint with LED
Accessories	


Mounting Information

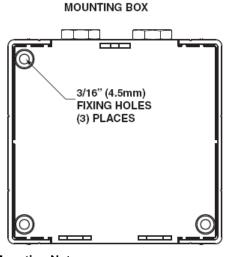

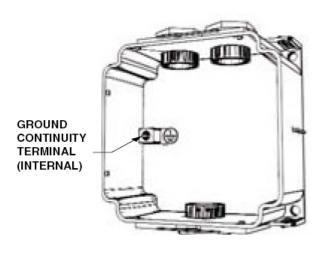


Mounting Notes:

- Mount the back box to a suitably flat surface using the three fixing holes and the screws provided in the installation pack.
- 2. The 20 mm cable entry holes should be in the vertical plane.
- 3. The back box can be mounted with either the single or the double entry holes at the top.

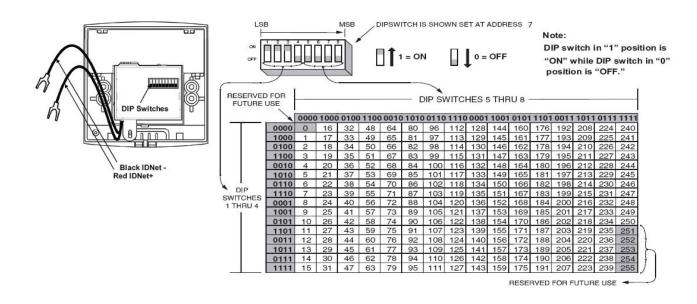


Fitting Callpoint to Backbox

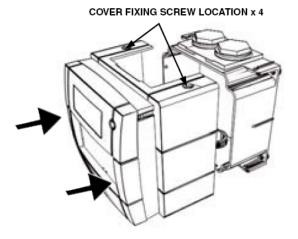

- 1. Ensure that the O-ring is correctly seated in the channel on the rear of the cover.
- 2. Place the cover squarely over the back box and carefully push the cover until the locating clips have engaged.
- 3. Do not use excessive force.
- 4. It is recommended that the 4 cover fixing screws are used to lock the cover into place.
- 5. The O-ring should be replaced when refitting or replacing the Waterproof Cover.


Removing Callpoint from Backbox

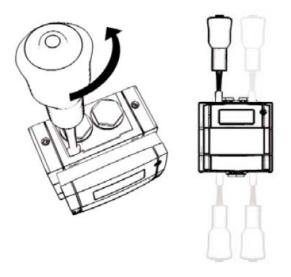

- To remove the cover, undo and remove the 4 Cover fixing screws.
- 2. Place the edge of a large flat bladed screwdriver into the slot between the Cover and back box as shown right and gently twist until the latches are disengaged.
- Pull cover away from backbox.

3

Replacing the Break Glass Element

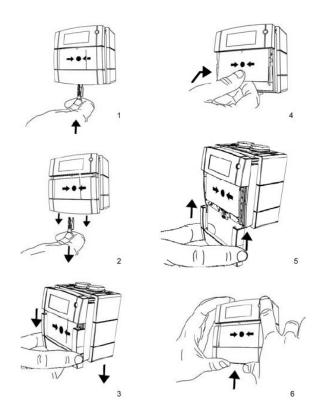

Tyco is a registered trademark of Tyco International Services GmbH and is used under license. Simplex, the Simplex logo, and IDNet are trademarks of Tyco International Ltd. and its affiliates and are used under license. NFPA 72 and National Fire Alarm Code are trademarks of the National Fire Protection Association (NFPA).